


1


The door cut out is already in the curtain panel.
 Along the top edge, we have sewn 2"-4" high loop Velcro to attach the strips to.
 This Velcro is 2"-4" wider than the cut out on each side. This allows for the strips to overlap with the curtain panel.

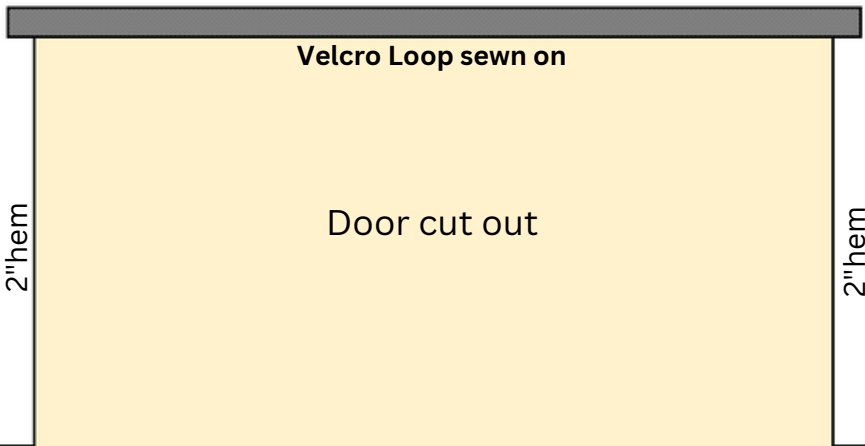

2

Start placing the strips on the front side of the curtain.
 The 1st strip lines up with the outer edge of the horizontal loop Velcro atop the cut out.
 On the front side, leave a gap between the strips.

- 8" W strips 50 % OL: ■ 4" space
- 12" W strip 33.33 % OL: ■ 8" space
- 12" W Strip 66.66 % OL: ■ 4" space

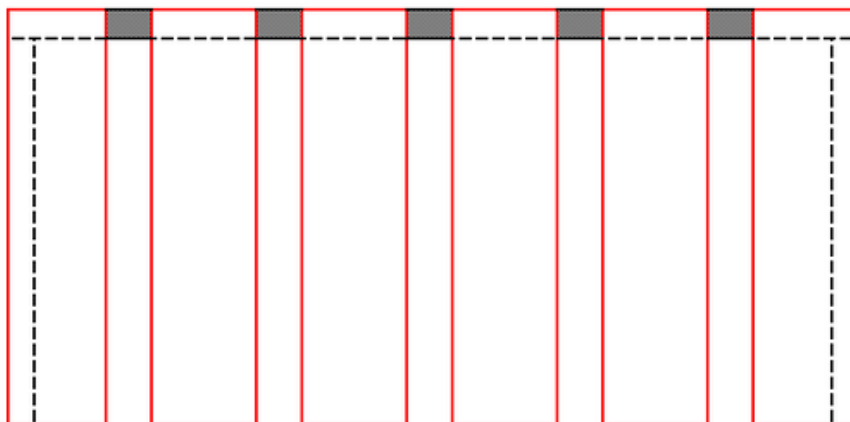


3

Once finished on the front, move to the back side of the curtains.

When attaching the strips on to the back side of the curtain panel, place the strips in the center of the space made on the front side. This creates an equal overlap on both sides with the strips on the front of the curtain.



At the end, if the last strips surpasses the Velcro atop the cut out, please cut that strip to size.

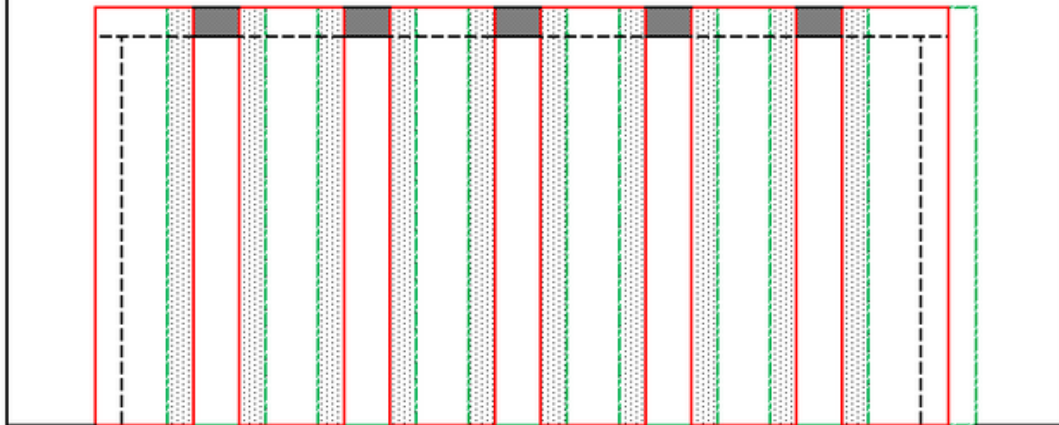


4

You will have 2 double sided Velcro hook pieces.


Those double sided Velcro pieces fill in the ends, on the back side of the curtain.

This is so that the cover strip completely sticks to Velcro atop the strips.

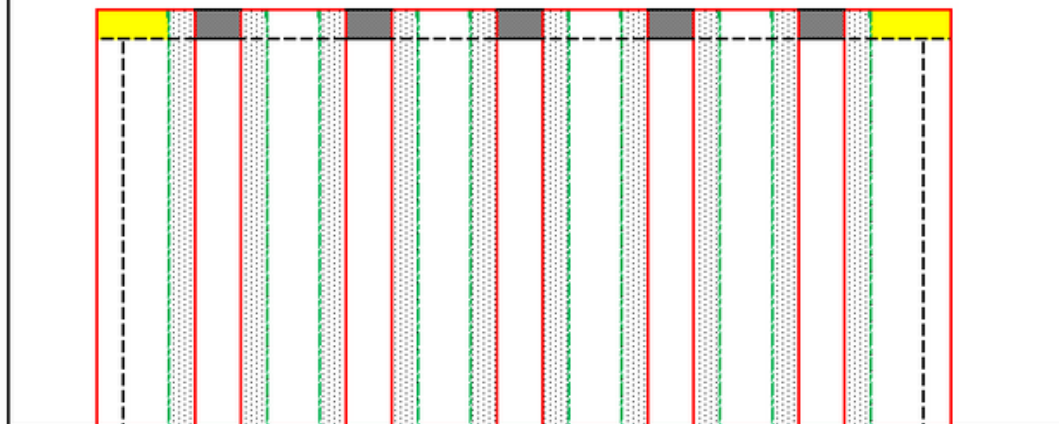

5

Adhere the 2 horizontal cover strips, on the front and back side, to hide the velcro attachment of the strips.

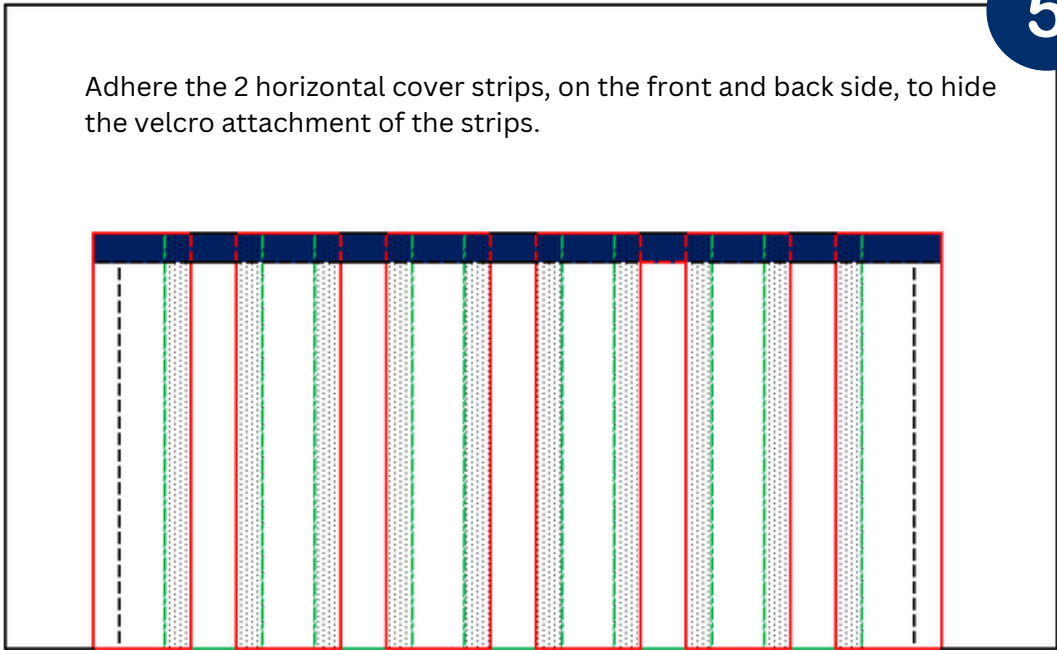

Voilà!

